

Compax3S quick reference guide

Single axis devices



C3Manager-Compax3S

192-121102 N24
2017-08

Release as from R09-63

Windows NT®, Windows 2000™, Windows XP™, Windows Vista, Windows 7 are trademarks of Microsoft Corporation.

EtherCAT® is a registered trademark and a patented technology of Beckhoff Automation GmbH, Germany.

CoDeSys® is a registered trademark of 3S-Smart Software Solutions GmbH.

PROFINET is a registered trademark of Profibus and PROFINET International.

Ethernet/IP is a trademark of Open DeviceNet Vendor Association.

Non-warranty clause

We checked the contents of this publication for compliance with the associated hard and software. We can, however, not exclude discrepancies and do therefore not accept any liability for the exact compliance. The information in this publication is regularly checked, necessary corrections will be part of the subsequent publications.

German Master created.

Production site:



Parker Hannifin Manufacturing Germany GmbH & Co. KG
Electromechanical & Drives Division [EME]

Robert-Bosch-Strasse 22

77656 Offenburg (Germany)

Tel.: + 49 (0781) 509-0

Fax: + 49 (0781) 509-98176

Internet: <http://www.parker.com/eme>

E-mail: <mailto:EM-Motion@parker.com>

Parker Hannifin GmbH - registered office: Bielefeld HRB 35489

Management Board: Ellen Raahede Secher, Dr.-Ing. Hans-Jürgen Haas, Günter Schrank, Kees Veraart - Chairman of the board:
Hansgeorg Greuner

Italy:

Parker Hannifin Manufacturing Srl

Electromechanical & Drives Division [EME]

Via C. Gounod, 1

20092 Cinisello Balsamo (Milano), Italy

Tel.: + 39 (0)2 361081

Fax: + 39 (0)2 36108400

Internet: <http://www.parker.com/eme>

E-mail: <mailto:parker.italy@parker.com>

Location USA:

Parker Hannifin Corporation • Electromechanical Automation

5500 Business Park Drive • Rohnert Park, CA 94928

Phone #: (800) 358-9068 • FAX #: (707) 584-3715

E-mail: CMR_help@parker.com mailto:emn_support@parker.com • Internet:

www.parker.com/emn <http://www.parker.com/emn>

Unser Produkt im Internet: <http://www.parker.com/eme/c3>

Downloads http://solutions.parker.com/c3_support

1. Notes on the Documents Supplied

Compax 3 - short reference guide

This short reference guide does contain only the basic information; for more detailed information please refer to the Help-files of the individual Compax3 device types.

Compax3 - Download page:

http://solutions.parker.com/c3_Support

Here you find the Compax3 ServoManager, Firmware, Field Bus Files, Targets and Application examples.

Online help system

After the installation of the ServoManager you can copy the desired Online help system with the "C3 ServoManager Help Installer" (you can select the C3 device type as well as the desired language) to your PC. The help system can be called up directly from the ServoManager. You will find the complete description of the selected device type in these online help files.

Please note that the help files are associated with defined device and software versions.

NOTICE

Status of the Manuals:

Help and PDFs are updated simultaneously. In case of doubt the HTML help shows the actual state in comparison to PDF edition.

For additional HTML help please refer to our website.

1.1 C3 ServoManager

PC requirements

Minimum requirements:

Operating system:	MS Windows XP SP3 / MS Vista (32 Bit) / Windows 7 (32 Bit / 64 Bit)
Browser:	MS Internet Explorer 8.x or higher
Processor:	Intel / AMD Multi core processor >=2GHz
User :	>= 1024MB
Hard disk:	>= 20GB available memory
Monitor:	Resolution 1024x768 or higher
Graphics card:	on onboard graphics (for performance reasons)
Interface:	USB 2.0

Note:

◆ For the installation of the software you need administrator authorization on the target computer.

Connection between PC and Compax3

Your PC is connected with Compax3 via a RS232 cable (SSK1). Start the Compax3 ServoManager and make the setting for the selected interface in the "**Options Communication settings RS232/RS485...**" menu.

Device Selection

In the menu tree under device selection you can read the device type of the connected device (Online Device Identification) or select a device type (Device Selection Wizard).

Configuration

Then you can double click on "Configuration" to start the configuration wizard. The wizard will lead you through all input windows of the configuration.

Inhalt

1. Notes on the Documents Supplied	3
1.1 C3 ServoManager.....	3
2. Introduction	5
2.1 Device assignment	5
2.2 Scope of delivery	5
2.3 Type specification plate	6
2.4 Packaging, transport, storage	7
2.5 Safety instructions.....	8
2.5.1. General hazards.....	8
2.5.2. Working safely / qualification.....	8
2.5.3. Special dangers	8
2.6 Warranty conditions	9
2.7 Conditions of utilization	9
2.7.1. Conditions of utilization for CE-conform operation.....	9
2.7.2. Conditions of utilization for UL certification Compax3S.....	11
2.7.3. Current on the mains PE (leakage current).....	12
2.7.4. Supply networks	12
2.8 EC declaration of conformity	13
3. Compax3 device description	14
3.1 State of delivery	14
3.2 Meaning of the status LEDs - Compax3 axis controller	14
3.3 Mounting and dimensions.....	15
3.3.1. Mounting and dimensions Compax3S0xxV2.....	15
3.3.2. Mounting and dimensions Compax3S100V2 and S0xxV4.....	16
3.3.3. Mounting and dimensions Compax3S150V2 and S150V4.....	17
3.3.4. Mounting and dimensions Compax3S300V4.....	18
4. Technical Data.....	19

2. Introduction

In this chapter you can read about:

Device assignment	5
Scope of delivery	5
Type specification plate	6
Packaging, transport, storage	7
Safety instructions	8
Warranty conditions	9
Conditions of utilization	9
EC declaration of conformity	13

2.1 Device assignment

This manual is valid for the following devices:

- ◆ Compax3S025V2 + supplement
- ◆ Compax3S063V2 + supplement
- ◆ Compax3S100V2 + supplement
- ◆ Compax3S150V2 + supplement
- ◆ Compax3S015V4 + supplement
- ◆ Compax3S038V4 + supplement
- ◆ Compax3S075V4 + supplement
- ◆ Compax3S150V4 + supplement
- ◆ Compax3S300V4 + supplement

2.2 Scope of delivery

- ◆ Device accessories for Compax3S
 - ◆ Cable clamps in different sizes for large area shielding of the motor cable, the screw for the cable clamp as well as
 - ◆ the mating plug connectors for the Compax3S plug connectors X1, X2, X3, and X4
 - ◆ a toroidal core ferrite for one cable of the motor holding brake
 - ◆ Lacing cord

2.3 Type specification plate

Compax3 - Type
specification plate
(example):

The present device type is defined by the type specification plate (on the housing):



Explanation:

1	Type designation: The complete order designation of the device (2, 5, 6, 9, 8).
2	C3 : Abbreviation for Compax3 S025 : Single axis device, nominal device current in 100mA (025=2.5A) M050 : Multi-axis device, nominal device current in 100mA (050=5A) H050 : High power device, nominal device current in 1A (050=50A)
	D6 : Designation nominal supply V2 : Mains supply voltage (2=230VAC/240VAC, 4=400VAC/480VAC)
3	Unique number of the particular device
4	Nominal supply voltage Power Input: Input supply data Power Output: Output data
5	Designation of the feedback system F10 : Resolver F11 : SinCos® / Single- or Multiturn F12 : Feedback module for direct drives
6	Device interface I10 : Analog, step/direction and encoder input I11 / I12 : Digital Inputs / Outputs and RS232 / RS485 I20 : Profibus DP / I21 : CANopen / I22 : DeviceNet / I30 : Ethernet Powerlink / I31 : EtherCAT / I32 : Profinet C20 : integrated controller C3 <i>powerPLmC</i> , Linux & Web server
7	Date of factory test
8	Options Mxx : I/O extension, HEDA Sx : optional safety technology on C3M
9	Technology function T10 : Servo controller T11 : Positioning T20 : Pressure / Volume flow rate T30 : Motion control in accordance with IEC61131-3 T40 : Electronic cam
10	CE compliance
11	Certified safety technology (corresponding to the logo displayed)
12	UL certified (corresponding to the logo displayed)

2.4 Packaging, transport, storage

Packaging material and transport

⚠ CAUTION

Caution!

The packaging material is inflammable, if it is disposed of improperly by burning, lethal fumes may develop.

The packaging material must be kept and reused in the case of a return shipment. Improper or faulty packaging may lead to transport damages.

Make sure to transport the drive always in a safe manner and with the aid of suitable lifting equipment (**Weight** (see on page 18)). Do never use the electric connections for lifting. Before the transport, a clean, level surface should be prepared to place the device on. The electric connections may not be damaged when placing the device.

First device checkup

- ◆ Check the device for signs of transport damages.
- ◆ Please verify, if the indications on the **Type identification plate** (see on page 6) correspond to your requirements.
- ◆ Check if the consignment is complete.

Disposal

This product contains materials that fall under the special disposal regulation from 2010, which corresponds to the EC directory 2008/98/EC for dangerous disposal material. We recommend to dispose of the respective materials in accordance with the respectively valid environmental laws. The following table states the materials suitable for recycling and the materials which have to be disposed of separately.

Material	suitable for recycling	Disposal
Metal	yes	no
Plastic materials	yes	no
Circuit boards	no	yes

Please dispose of the circuit boards according to one of the following methods:

- ◆ Burning at high temperatures (at least 1200°C) in an incineration plant licensed in accordance with part A or B of the environmental protection act.
- ◆ Disposal via a technical waste dump which is allowed to take on electrolytic aluminum condensers. Do under no circumstances dump the circuit boards at a place near a normal waste dump.

Storage

If you do not wish to mount and install the device immediately, make sure to store it in a dry and clean environment. Make sure that the device is not stored near strong heat sources and that no metal chippings can get into the device.

Please note in the event of storage >1 year:

Forming the capacitors

Forming the capacitors only required with 400 VAC axis controllers and mains module PSUP

If the device was stored longer than one year, the intermediate capacitors must be re-formed!

Forming sequence:

- ◆ Remove all electric connections
- ◆ Supply the device with 230VAC single phase for 30 minutes
 - ◆ via the L1 and L2 terminals on the device or
 - ◆ with multi axis devices via L1 and L2 on the mains module PSUP.

2.5 Safety instructions

2.5.1. General hazards

General Hazards on Non-Compliance with the Safety Instructions

The device described in this manual is designed in accordance with the latest technology and is safe in operation. Nevertheless, the device can entail certain hazards if used improperly or for purposes other than those explicitly intended.

Electronic, moving and rotating components can

- ◆ cause danger for life and limb of the operator and
- ◆ material damage

Designated use

The device is designed for operation in electric power drive systems (VDE0160).

Motion sequences can be automated with this device. Several motion sequences can be combined by interconnecting several of these devices. Mutual interlocking functions must be incorporated for this purpose.

2.5.2. Working safely / qualification

This device may be operated only by qualified personnel.

Qualified personnel in the sense of these operating instructions consists of:

- ◆ Persons who, by virtue to their training, experience and instruction, and their knowledge of pertinent norms, specifications, accident prevention regulations and operational relationships, have been authorized by the officer responsible for the safety of the system to perform the required task and in the process are capable of recognizing potential hazards and avoiding them (definition of technical personnel according to VDE105 or IEC364),
- ◆ who have a knowledge of first-aid techniques and the local emergency rescue services,
- ◆ who have read and will observe the safety instructions,
- ◆ who have read and observe the manual or help (or the sections pertinent to the work to be carried out).

This applies to all work relating to setting up, commissioning, configuring, programming, modifying the conditions of utilization and operating modes, and to maintenance work.

This manual and the help information must be available close to the device during the performance of all tasks.

2.5.3. Special dangers



DANGER

Danger!

Due to movable machine parts and high voltages, the device can pose a lethal danger. Danger of electric shock in the case of non-respect of the following instructions. The device corresponds to DIN EN 61800-3, i.e. it is subject to limited sale. The device can emit disturbances in certain local environments. In this case, the user is liable to take suitable measures.

- ◆ Check that all live terminals are secured against contact. Perilous voltage levels of up to 850V occur.
- ◆ Do not bypass power direct current.



DANGER

Caution - Risk of Electric Shock!

Always switch off devices before wiring them!

Dangerous voltages are still present until 15 min. after switching off the power supply.

- ◆ The device must be permanently grounded due to high earth leakage currents.
- ◆ The drive motor must be grounded with a suitable protective lead.
- ◆ The devices are equipped with high voltage DC condensers. Before removing the protective cover, the discharging time must be awaited. After switching off the supply voltage, it may take up to 15 minutes (with additional capacity modules it may take up to 30 minutes) to discharge the capacitors.

Danger of electric shock in case of non respect.

- ◆ Before you can work on the device, the supply voltage must be switched off at the L1, L2 and L3 clamps. Wait at least 15 minutes so that the power direct current may sink to a secure value (<50V). Check with the aid of a voltmeter, if the voltage at the DC+ and DC- clamps has fallen to a value below 50V.
Danger of electric shock in case of non respect.
- ◆ Do never perform resistance tests with elevated voltages (over 690V) on the wiring without separating the circuit to be tested from the drive.
- ◆ Please exchange devices only in currentless state and, in an axis system, only in a defined original state.
- ◆ If the axis controller is replaced, it is absolutely necessary to transfer the configuration determining the correct operation of the drive to the device, before the device is put into operation. Depending on the operation mode, a machine zero run will be necessary.
- ◆ The device contains electrostatically sensitive components. Please heed the electrostatic protection measures while working at/with the device as well as during installation and maintenance.

2.6 Warranty conditions

- ◆ The device must not be opened.
- ◆ Do not make any modifications to the device, except for those described in the manual.
- ◆ Make connections to the inputs, outputs and interfaces only in the manner described in the manual.
- ◆ Fix the devices according to the **mounting instructions**. (see on page 15)
We cannot provide any guarantee for other mounting methods.

Note on exchange of options

Device options must be exchanged in the factory to ensure hardware and software compatibility.

- ◆ When installing the device, make sure the heat dissipators of the device receive sufficient air and respect the recommended mounting distances of the devices with integrated ventilator fans in order to ensure free circulation of the cooling air.
- ◆ Make sure that the mounting plate is not exposed to external temperature influences.

2.7 Conditions of utilization

2.7.1. Conditions of utilization for CE-conform operation

- Industry and trade -

The EC guidelines for electromagnetic compatibility 2014/30/EU and for electrical operating devices for utilization within certain voltage limits 2014/35/EU are fulfilled when the following boundary conditions are observed:

Operation of devices only in the state in which they are delivered.

In order to ensure contact protection, all mating plugs must be present on the device connections even if they are not wired.

Please respect the specifications of the manual resp. of the help function, especially the technical characteristics (mains connection, circuit breakers, output data, ambient conditions,...).

2.7.1.1 Conditions of utilization mains filter

Mains filter: A mains filter is required in the mains input line if the motor cable exceeds a certain length. Filtering can be provided centrally at the system mains input or separately for each device.

Use of the devices in a commercial and residential area (limit value class in accordance with EN 61800-3)

The following mains filters are available for independent utilization:

Device: Compax3S	Limit value class	Motor cable length	Mains filter Order No.:
S0xxV2	C2	< 10 m	without
	C2	> 10 m, < 100 m	NFI01/01
S1xxV2, S0xxV4, S150V4	C2	< 10 m	without
	C2	> 10 m, < 100 m	NFI01/02
S300V4	C3*	< 7.5 m	without
	C2, C3	< 100 m	NFI01/03

* only at standard frequency of the power amplifier (8 kHz).

Connection length: Connection between mains filter and device:

unshielded: < 0.5 m

shielded < 5 (fully shielded on ground - e.g. ground of control cabinet)

2.7.1.2 Conditions of utilization for cables / motor filter

Motor and Feedback cable: Operation of the devices only with motor and feedback cables whose plugs contain a special full surface area screening.

Compax3S motor cable < 100 m (the cable should not be rolled up!)
A motor output filter is required for motor cables >20 m:
◆ MDR01/04 (max. 6.3 A nominal motor current)
◆ MDR01/01 (max. 16 A nominal motor current)
◆ MDR01/02 (max. 30 A nominal motor current)

Shielding connection of the motor cable The cable must be fully-screened and connected to the device housing. Use the cable clamps/shield connecting terminals furnished with the device.
The shield of the cable must also be connected with the motor housing. The fixing (via plug or screw in the terminal box) depends on the motor type.

Feedback cable Compax3S < 100 m

Cable Corresponding to the specifications of the terminal clamp with a temperature range of up to 60°C.

Cable installation: ◆ Signal lines and power lines should be installed as far apart as possible.
◆ Signal lines should never pass close to excessive sources of interference (motors, transformers, contactors etc.).
◆ Do not place mains filter output cable parallel to the load cable.

2.7.1.3 Additional conditions of utilization

Motors: Operation with standard motors.

Control: Use only with aligned controller (to avoid control loop oscillation).

Grounding: Connect the filter housing and the device to the cabinet frame, making sure that the contact area is adequate and that the connection has low resistance and low inductance.

Compax3S300V4 Never mount the filter housing and the device on paint-coated surfaces!
For CE and UL conform operation of the Compax3S300V4, a mains filter is compulsory:
◆ 400 VAC / 0.740 mH certified in accordance with EN 61558-1 bzw. 61558-2-2
◆ We offer the mains filter as an accessory: LIR01/01

Accessories: Make sure to use only the accessories recommended by Parker.

Connect all cable shields at both ends, ensuring large contact areas!

NOTICE

This is restricted operation category product according to EN 61800-3. This product can cause high-frequency disturbance in domestic areas. Users are asked to take suitable action if this proves to be the case.

2.7.2. Conditions of utilization for UL certification Compax3S

UL certification for Compax3S

conform to UL:	◆ according to UL508C
Certified	◆ E-File_No.: E235342

The UL certification is documented by a "UL" logo on the device (type specification plate).



"UL" logo:

Conditions of utilization

- ◆ The devices are only to be installed in a degree of contamination 2 environment (maximum).
- ◆ The devices must be appropriately protected (e.g. by a switching cabinet).
- ◆ The X2 terminals are not suitable for field wiring.
- ◆ Tightening torque of the field wiring terminals (green Phoenix plugs)
 - ◆ C3S0xxV2 0.57 - 0.79Nm 5 - 7Lb.in
 - ◆ C3S1xxV2, 0.57 - 0.79Nm 5 - 7Lb.in
 - C3S0xxV4, C3S150V4
 - ◆ C3S300V4 1.25 - 1.7Nm 11 - 15Lb.in
- ◆ Temperature rating of field installed conductors shall be at least 60°C. Use copper lines only
Please use the cables described in the accessories chapter, they feature a temperature rating of at least 60°C.
- ◆ Maximum Surrounding Air Temperature: 45°C.
- ◆ Motor over temperature monitoring is only supported, if the external temperature sensor is connected.
- ◆ Suitable for use on a circuit capable of delivering at least 5000 symmetrical amperes effectively and 480 Volts when protected with fuses.
Fuses:
In addition to the main fuse, the devices must be equipped with a S201K, S203K, S271K or S273K circuit breaker with K characteristic made by ABB.
 - ◆ C3S025V2: ABB, nom 480V 10A, 6kA
 - ◆ C3S063V2: ABB, nom 480V, 16A, 6kA
 - ◆ C3S100V2: ABB, nom 480V, 16A, 6kA
 - ◆ C3S150V2: ABB, nom 480V, 20A, 6kA
 - ◆ C3S015V4: ABB, nom 480V, 6A, 6kA
 - ◆ C3S038V4: ABB, nom 480V, 10A, 6kA
 - ◆ C3S075V4: ABB, nom 480V, 16A, 6kA
 - ◆ C3S150V4: ABB, nom 480V, 20A, 6kA
 - ◆ C3S300V4: ABB, nom 480V, 25A, 6kA



CAUTION

Risk of electric shock.

Discharge time of the bus capacitor is 15 minutes.

- ◆ The drive provides internal motor overload protection.
This must be set so that 200% of the motor nominal current are not exceeded.
- ◆ Cable cross-sections
 - ◆ Mains input: corresponding to the recommended fuses.
 - ◆ Motor cable: corresponding to the Nominal output currents
 - ◆ Maximum cross-section limited by the terminals mm² / AWG
 - ◆ C3S0xxV2 2.5mm² AWG 12
 - ◆ C3S1xxV2, 4.0mm² AWG 10
 - C3S0xxV4, C3S150V4
 - ◆ C3S300V4 6.0mm² AWG 7

2.7.3. Current on the mains PE (leakage current)



WARNING

This product can cause a direct current in the protective lead. If a residual current device (RCD) is used for protection in the event of direct or indirect contact, only a type B (all current sensitive) RCD is permitted on the current supply side of this product. Otherwise, a different protective measure must be taken, such as separation from the environment by doubled or enforced insulation or separation from the mains power supply by means of a transformer. Respect the supplier's instructions.

Mains filters do have high leakage currents due to their internal capacity. An internal mains filter is usually integrated into the servo controllers. Additional discharge currents are caused by the capacities of the motor cable and the motor winding. Due to the high clock frequency of the power output stage, the leakage currents do have high-frequency components. Please check if the FI protection switch is suitable for the individual application.

If an external mains filter is used, an additional leakage current will be produced. The figure of the leakage current depends on the following factors:

- ◆ Length and properties of the motor cable
- ◆ Switching frequency
- ◆ Operation with or without external mains filter
- ◆ Motor cable with or without shield network
- ◆ Motor housing grounding (how and where)

Remark:

- ◆ The leakage current is important with respect to the handling and usage safety of the device.
- ◆ A pulsing leakage current occurs if the supply voltage is switched on.

Please note:


The device must be operated with effective grounding connection, which must comply with the local regulations for high leakage currents (>3.5 mA).

Due to the high leakage currents it is not advisable to operate the servo drive with an earth leakage circuit breaker.

2.7.4. Supply networks

This product is designed for fixed connection to TN networks (TN-C, TN-C-S or TN-S). Please note that the line-earth voltage may not exceed 300VAC.

- ◆ When grounding the neutral conductor, mains voltages of up to 480VAC are permitted.
- ◆ When grounding an external conductor (delta mains, two-phase mains), mains voltages (external conductor voltages) of up to 240VAC are permitted.

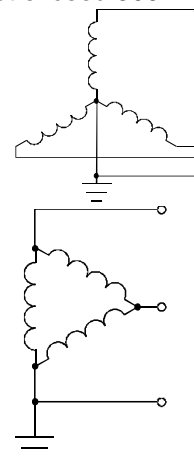

Devices which are to be connected to an IT network must be provided with a separating transformer. Then the devices are operated locally as in a TN network. The secondary sided center of the separating transformer must be grounded and connected to the PE connector of the device.

2.8 EC declaration of conformity



Parker Hannifin Manufacturing Germany GmbH & Co. KG
Automation Group, Electromechanical & Drives Division Europe
Robert-Bosch-Straße 22
D-77656 Offenburg

Tel.: +49 (0) 781-509-0
Fax.: +49 (0) 781-509-98

www.parker.com/eme

EU-KONFORMITÄTSERKLÄRUNG EU DECLARATION OF CONFORMITY

Dokumenten Nr. **DoC001-R 7.0**
Declaration No.

Der Hersteller **Parker Hannifin Manufacturing Germany GmbH & Co. KG**
The Manufacturer

Anschrift **Robert-Bosch-Straße 22**
Address **77656 Offenburg**
Deutschland

erklärt in alleiniger Verantwortung die Konformität der folgenden Produktreihe
declares under sole responsibility the conformity of the following product series

Produkt **Antrieb**
Product **Drive**

Produktname **Compax3 Serie – C3S (Einachsfamilie)**
Product name **Compax3 series – C3S (Single axis family)**

Angewandte harmonisierte Normen / *Applied harmonized standards:*

Norm / Standard	Titel / Title
EN 61800-5-1:2007	Elektrische Leistungsantriebssysteme mit einstellbarer Drehzahl Teil 5-1: Anforderungen an die Sicherheit – Elektrische, thermische und energetische Anforderungen <i>Adjustable speed electrical power drive systems</i> <i>Part 5-1: Safety requirements - Electrical, thermal and energy</i>
EN 61800-5-2:2007*	Elektrische Leistungsantriebssysteme mit einstellbarer Drehzahl Teil 5-2: Anforderungen an die Sicherheit – Funktionale Sicherheit <i>Adjustable speed electrical power drive systems</i> <i>Part 5-2: Safety requirements - Functional</i>
EN ISO 13849-1:2015*	Sicherheit von Maschinen – Sicherheitsbezogene Teile von Steuerungen - Teil 1: Allgemeine Gestaltungsleitsätze <i>Safety of machinery – Safety-related parts of control systems -</i> <i>Part 1: General principles for design</i>
EN 61800-3:2004 + A1:2012	Drehzahlveränderbare elektrische Antriebe Teil 3: EMV-Anforderungen einschließlich spezieller Prüfverfahren <i>Adjustable speed electrical power drive systems</i> <i>Part 3: EMC product standard including specific test methods.</i>
EN50581:2012	Technische Dokumentation zur Beurteilung von Elektro- und Elektronikgeräten hinsichtlich der Beschränkung gefährlicher Stoffe <i>Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances</i>

Die Produkte entsprechen den Anforderungen der Niederspannungs-Richtlinie 2014/35/EU, der EMV-Richtlinie 2014/30/EU, der RoHS Richtlinie 2011/65/EU und als Sicherheitsbauteil* der Maschinenrichtlinie 2006/42/EG (Anhang IV).
The products are in accordance with the Low Voltage Directive 2014/35/EU, the EMC Directive 2014/30/EU, RoHS Directive 2011/65/EU and as safety component the Machinery Directive 2006/42/EC (Appendix IV).*

*gilt nicht für die C3S Typen C10, C13, C20, X10; *not valid for the C3S types C10, C13, C20, X10*

Bemerkungen/ Notes:

Den im Produkthandbuch beschriebenen Sicherheits-, Installations- und Bedienungshinweisen muss Folge geleistet werden.
These products must be installed and operated with reference to the instructions in the product manual.
All instructions, warnings and safety information of the product manual must be adhered to.

Die Produkte sind für den Einbau in eine Maschine bestimmt. Die Inbetriebnahme ist solange untersagt, bis die Konformität des Endproduktes gemäß der Maschinen-Richtlinie 2006/42/EG festgestellt ist.
The products are components to be incorporated into machinery and may not be operated alone. The complete machinery or installation may only be put into service when the safety considerations of the Machinery Directive 2006/42/EC are fully adhered to.

Offenburg, 2017-07-21

Jürgen Killius, Operations Manager

Seite / Page 1 von / of 3

Parker Hannifin Manufacturing Germany GmbH & Co. KG
Sitz: Bielefeld HRB 35489
USt.-IdNr.: DE 122 802 922
Steuernummer: 5349 5747 1543

Commerzbank Offenburg
BLZ 664 400 84
Konto-Nr. 45 0 19 12 00
BIC/Swift-Code: COBADEFF
IBAN DE95 6644 0084 0450 1912 00

Geschäftsführung:
Dr.-Ing. Hans-Jürgen Haas, Ellen Raahede Secher, Günter Schrank, Kees Veraart
Vorsitzender des Aufsichtsrates: Hansgeorg Greuner

3. Compax3 device description

In this chapter you can read about:

State of delivery.....	14
Meaning of the status LEDs - Compax3 axis controller	14
Mounting and dimensions.....	15

3.1 State of delivery

Compax3 is delivered without configuration!

After switching on the 24VDC supply, the red LED is flashing while the green LED is dark.

Please configure the device with the help of the Windows-Software "Compax3 ServoManager"!

3.2 Meaning of the status LEDs - Compax3 axis controller

Device status LEDs	Right LED (red)	Left LED (green)
Voltages missing	off	off
During the booting sequence	alternately flashing	
<ul style="list-style-type: none"> ◆ No configuration present. ◆ SinCos® feedback not detected. ◆ Compax3 IEC61131-3 program not compatible with Compax3 Firmware. ◆ no Compax3 IEC61131-3 program ◆ Hall signals invalid. 	flashes slowly	off
Axis powerless	off	flashes slowly
Power supplied to axis; commutation calibration running	off	flashes quickly
Axis powered	off	on
Axis in error state / error present / axis powered (error reaction 1)	flashes quickly	on
Axis in error state / error present / axis not powered (error reaction 2)	on	off
Compax3 faulty: Please contact us	on	on

3.3 Mounting and dimensions


In this chapter you can read about:

Mounting and dimensions Compax3S0xxV2.....	15
Mounting and dimensions Compax3S100V2 and S0xxV4.....	16
Mounting and dimensions Compax3S150V2 and S150V4.....	17
Mounting and dimensions Compax3S300V4.....	18

3.3.1. Mounting and dimensions Compax3S0xxV2

Mounting:

3 socket head screws M5

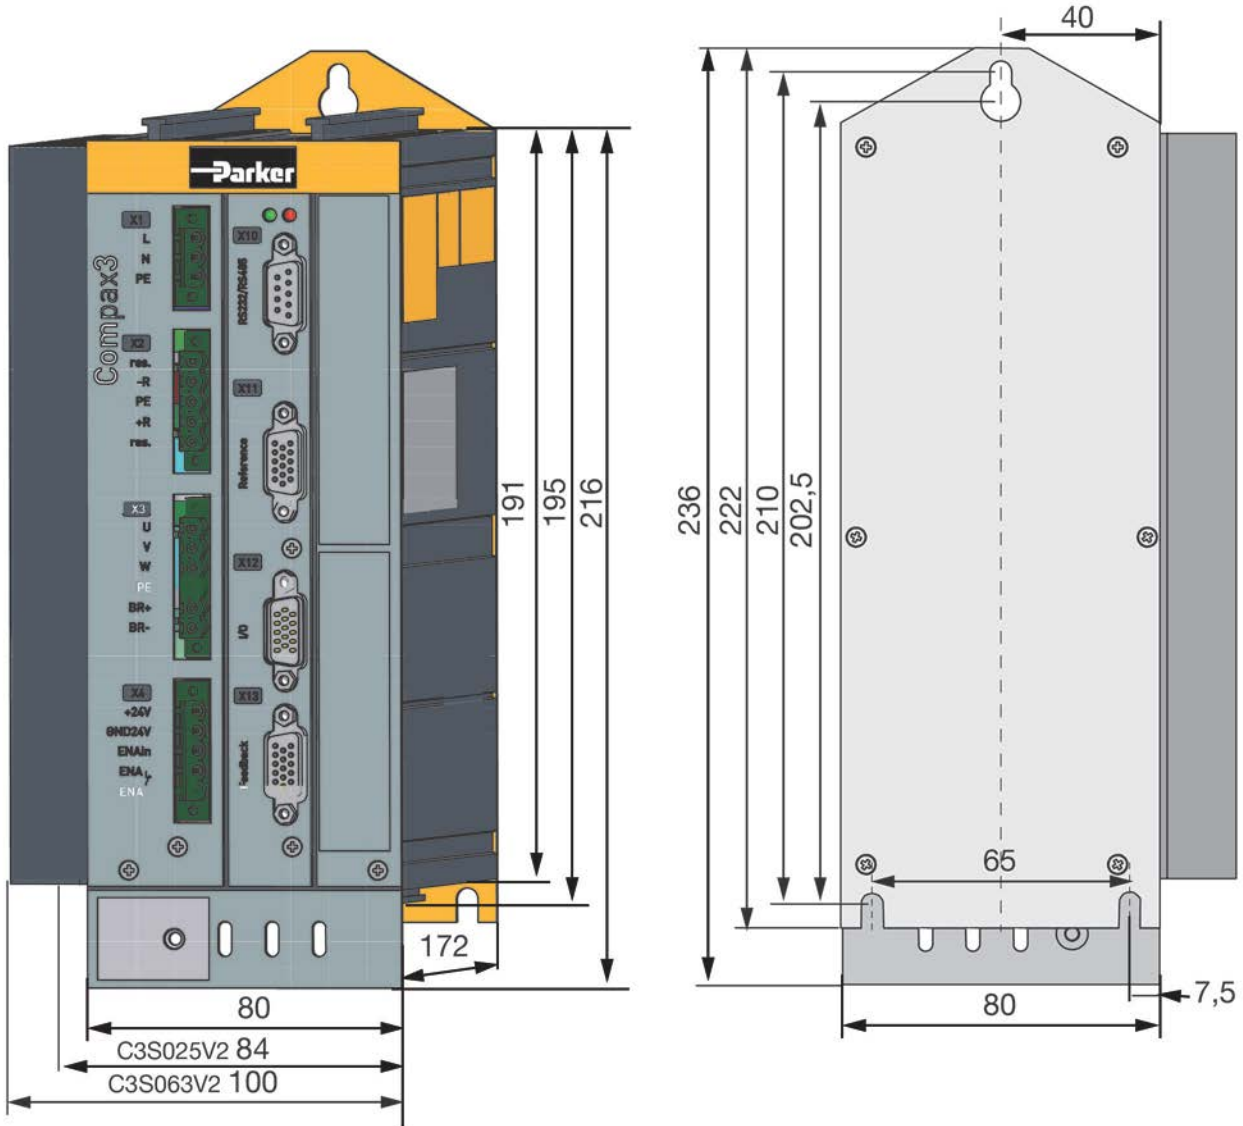

Stated in mm


Please respect an appropriate mounting gap in order to ensure sufficient convection:

- ◆ At the side: 15mm
- ◆ At the top and below: at least 100mm

3.3.2. Mounting and dimensions Compax3S100V2 and S0xxV4

Mounting:

3 socket head screws M5

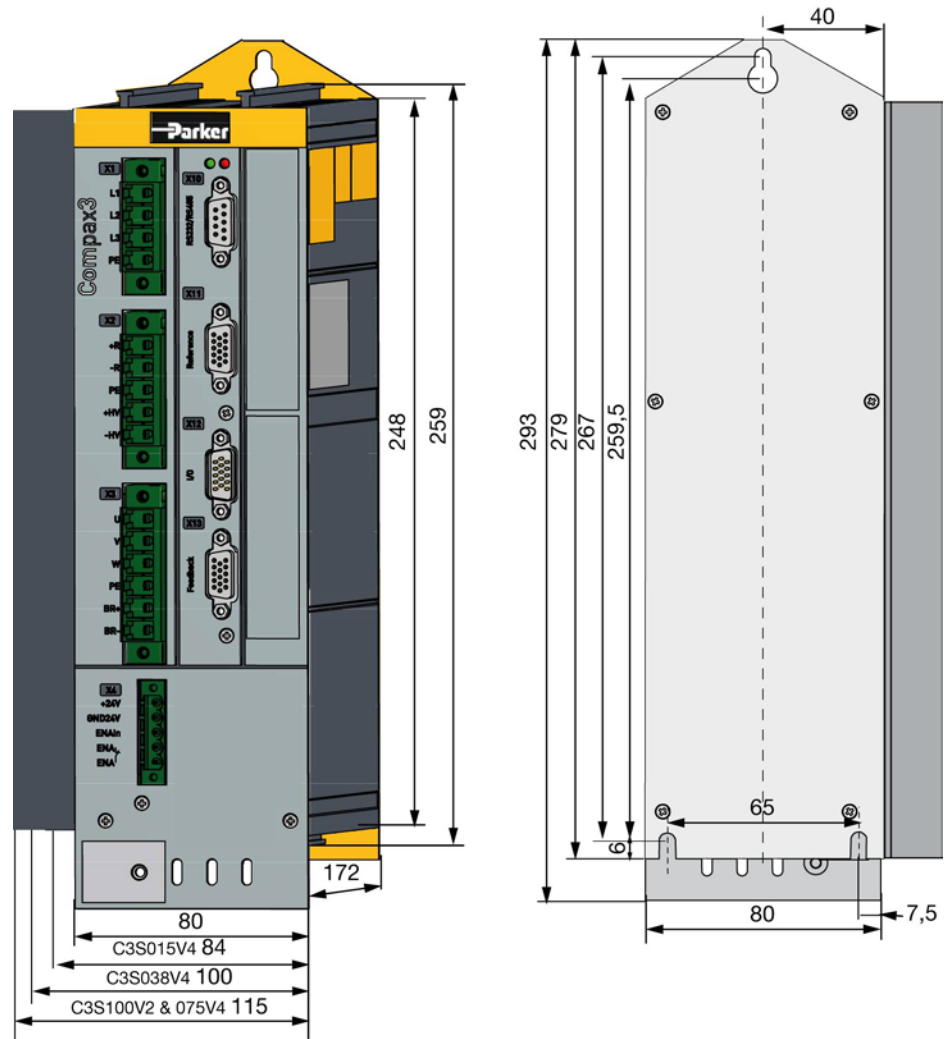

Stated in mm


Please respect an appropriate mounting gap in order to ensure sufficient convection:

- ◆ At the side: 15mm
- ◆ At the top and below: at least 100mm

3.3.3. Mounting and dimensions Compax3S150V2 and S150V4

Mounting:

4 socket head screws M5

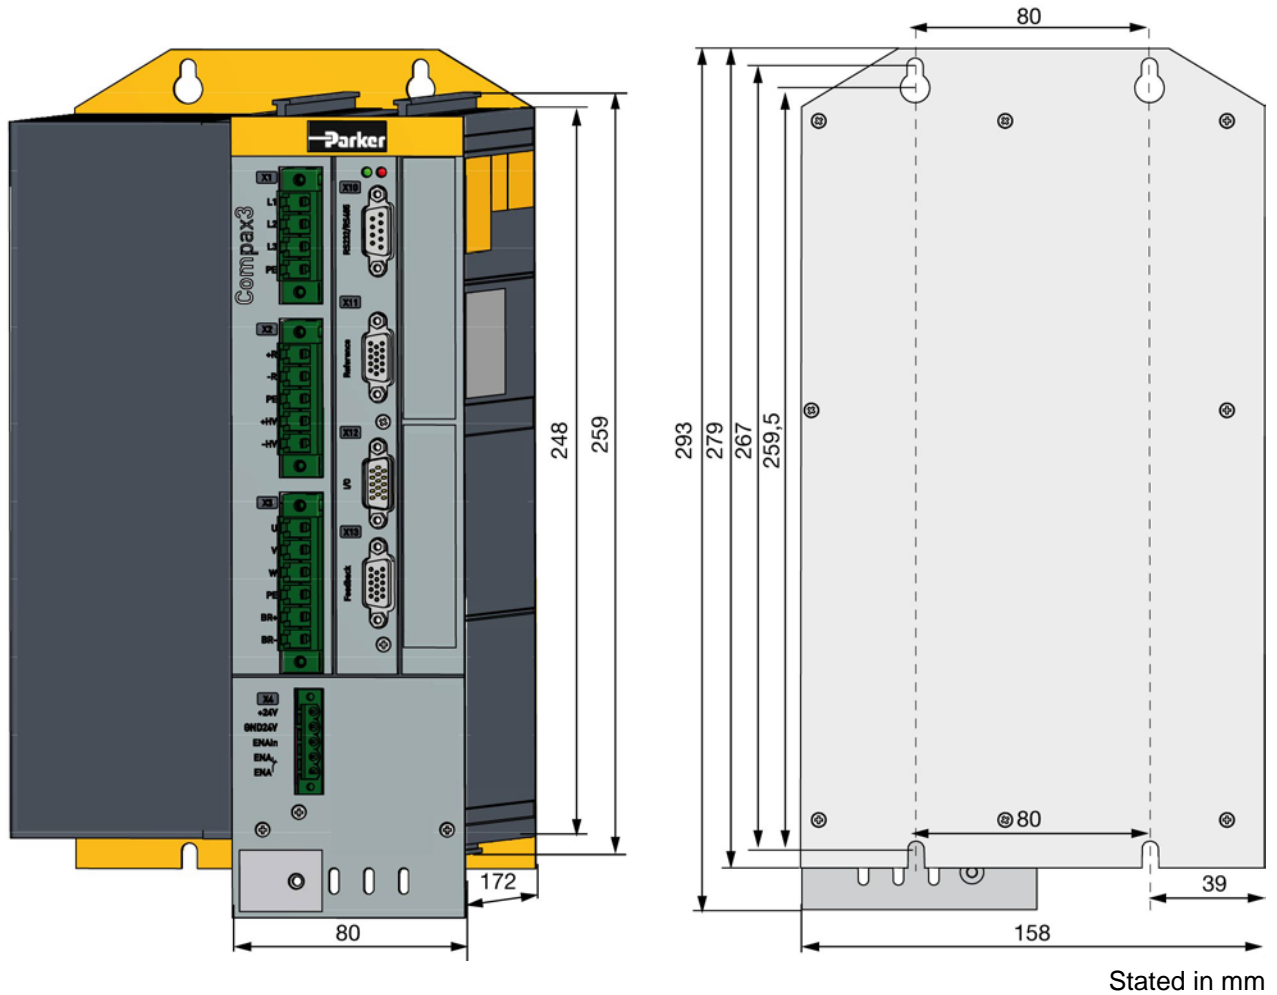


Please respect an appropriate mounting gap in order to ensure sufficient convection:

- ◆ At the side: 15mm
- ◆ At the top and below: at least 100mm

3.3.4. Mounting and dimensions Compax3S300V4

Mounting:

4 socket head screws M5

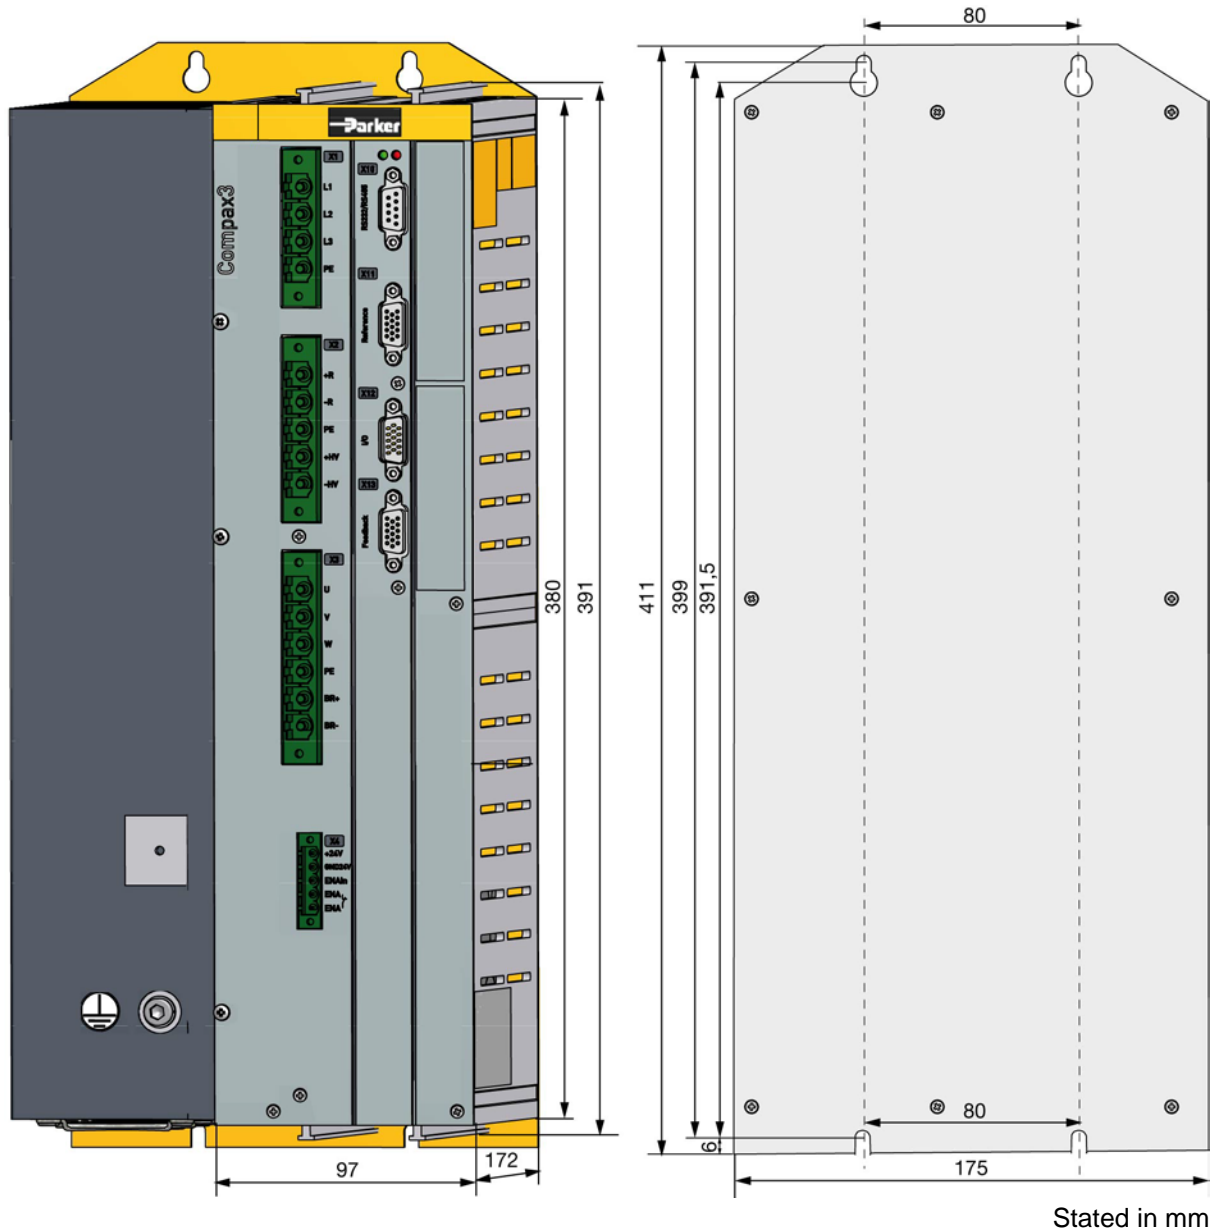

Stated in mm

Please respect an appropriate mounting gap in order to ensure sufficient convection:

- ◆ At the side: 15mm
- ◆ At the top and below: at least 100mm

Compax3S300V4 is force-ventilated via a fan integrated into the heat dissipator!

4. Technical Data

Mains connection Compax3S0xxV2 1AC

Controller type	S025V2	S063V2
Continuous working voltage	Single phase 230VAC/240VAC 80-253VAC / 50-60Hz	
Receiver current consumption	6Arms	13Arms
Maximum fuse rating per device	10 A (automatic circuit breaker K)	16A (automatic circuit breaker K)

Mains connection Compax3S1xxV2 3AC

Controller type	S100V2	S150V2
Supply voltage	Three phase 3* 230VAC/240VAC 80-253VAC / 50-60Hz	
Input current	10Arms	13Arms
Maximum fuse rating per device	16A	20A
	MCB miniature circuit breaker, K characteristic	

Mains connection Compax3SxxxV4 3AC

Controller type	S015V4	S038V4	S075V4	S150V4	S300V4
Continuous working voltage	Three phase 3*400VAC/480VAC 80-528VAC / 50-60Hz				
Receiver current consumption	3Aeff	6Arms	10Arms	16Arms	22Arms
Maximum fuse rating per device	6A	10A	16A	20A	25A
	MCB miniature circuit breaker, K characteristic				

Control voltage 24VDC Compax3S and Compax3H

Controller type	Compax3
Voltage range	21 - 27VDC
Current drain of the device	0.8 A
Total current drain	0.8 A + Total load of the digital outputs + current for the motor holding brake
Ripple (max.)	0.5Vpp
Requirement according to safe extra low voltage (SELV)	yes
Short-circuit proof	conditional (internally protected with 3.15AT)
Cable length	< 30 m

Detailed information on the technical data of the Compax3 devices can be found in the Help- or PDF-files of the individual Compax3 device types.

Parker Worldwide

Europe, Middle East, Africa

AE – United Arab Emirates, Dubai
Tel: +971 4 8127100
parker.me@parker.com

AT – Austria, Wiener Neustadt
Tel: +43 (0)2622 23501-0
parker.austria@parker.com

AT – Eastern Europe, Wiener Neustadt
Tel: +43 (0)2622 23501 900
parker.easteurope@parker.com

AZ – Azerbaijan, Baku
Tel: +994 50 2233 458
parker.azerbaijan@parker.com

BE/LU – Belgium, Nivelles
Tel: +32 (0)67 280 900
parker.belgium@parker.com

BG – Bulgaria, Sofia
Tel: +359 2 980 1344
parker.bulgaria@parker.com

BY – Belarus, Minsk
Tel: +48 (0)22 573 24 00
parker.poland@parker.com

CH – Switzerland, Etoy
Tel: +41 (0)21 821 87 00
parker.switzerland@parker.com

CZ – Czech Republic, Klecany
Tel: +420 284 083 111
parker.czechrepublic@parker.com

DE – Germany, Kaarst
Tel: +49 (0)2131 4016 0
parker.germany@parker.com

DK – Denmark, Ballerup
Tel: +45 43 56 04 00
parker.denmark@parker.com

ES – Spain, Madrid
Tel: +34 902 330 001
parker.spain@parker.com

FI – Finland, Vantaa
Tel: +358 (0)20 753 2500
parker.finland@parker.com

FR – France, Contamine s/Arve
Tel: +33 (0)4 50 25 80 25
parker.france@parker.com

GR – Greece, Athens
Tel: +30 210 933 6450
parker.greece@parker.com

HU – Hungary, Budaörs
Tel: +36 23 885 470
parker.hungary@parker.com

IE – Ireland, Dublin
Tel: +353 (0)1 466 6370
parker.ireland@parker.com

IT – Italy, Corsico (MI)
Tel: +39 02 45 19 21
parker.italy@parker.com

KZ – Kazakhstan, Almaty
Tel: +7 7273 561 000
parker.easteurope@parker.com

NL – The Netherlands, Oldenzaal
Tel: +31 (0)541 585 000
parker.nl@parker.com

NO – Norway, Asker
Tel: +47 66 75 34 00
parker.norway@parker.com

PL – Poland, Warsaw
Tel: +48 (0)22 573 24 00
parker.poland@parker.com

PT – Portugal, Leca da Palmeira
Tel: +351 22 999 7360
parker.portugal@parker.com

RO – Romania, Bucharest
Tel: +40 21 252 1382
parker.romania@parker.com

RU – Russia, Moscow
Tel: +7 495 645-2156
parker.russia@parker.com

SE – Sweden, Spånga
Tel: +46 (0)8 59 79 50 00
parker.sweden@parker.com

SK – Slovakia, Banská Bystrica
Tel: +421 484 162 252
parker.slovakia@parker.com

SL – Slovenia, Novo Mesto
Tel: +386 7 337 6650
parker.slovenia@parker.com

TR – Turkey, Istanbul
Tel: +90 216 4997081
parker.turkey@parker.com

UA – Ukraine, Kiev
Tel: +48 (0)22 573 24 00
parker.poland@parker.com

UK – United Kingdom, Warwick
Tel: +44 (0)1926 317 878
parker.uk@parker.com

ZA – South Africa, Kempton Park
Tel: +27 (0)11 961 0700
parker.southafrica@parker.com

North America

CA – Canada, Milton, Ontario
Tel: +1 905 693 3000

US – USA, Cleveland
Tel: +1 216 896 3000

Asia Pacific

AU – Australia, Castle Hill
Tel: +61 (0)2-9634 7777

CN – China, Shanghai
Tel: +86 21 2899 5000

HK – Hong Kong
Tel: +852 2428 8008

IN – India, Mumbai
Tel: +91 22 6513 7081-85

JP – Japan, Tokyo
Tel: +81 (0)3 6408 3901

KR – South Korea, Seoul
Tel: +82 2 559 0400

MY – Malaysia, Shah Alam
Tel: +60 3 7849 0800

NZ – New Zealand, Mt Wellington
Tel: +64 9 574 1744

SG – Singapore
Tel: +65 6887 6300

TH – Thailand, Bangkok
Tel: +662 186 7000

TW – Taiwan, Taipei
Tel: +886 2 2298 8987

South America

AR – Argentina, Buenos Aires
Tel: +54 3327 44 4129

BR – Brazil, Sao Jose dos Campos
Tel: +55 800 727 5374

CL – Chile, Santiago
Tel: +56 2 623 1216

MX – Mexico, Toluca
Tel: +52 72 2275 4200

We reserve the right to make technical changes. The data correspond to the technical state at the time of printing.
© 2015 Parker Hannifin Corporation.
All rights reserved.



EMEA Product Information Centre

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, SK, UK, ZA)

US Product Information Centre

Toll-free number: 1-800-27 27 537

www.parker.com

Your local authorized Parker distributor